
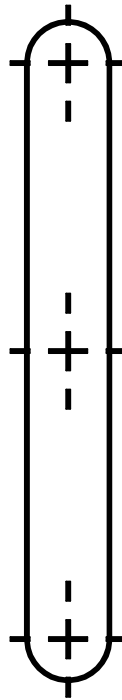


# MOUNTING TEMPLATE

## TOOLS REQUIRED:

- Powered Drill
- 13/32 Drill Bit
- Hammer
- Center Punch

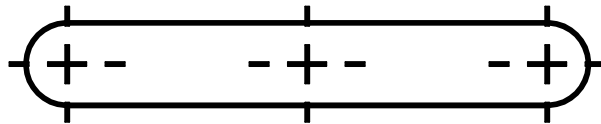

**NOTE:** A QUANTITY OF (3) GRADE 5 OR BETTER SIZE 3/8 BOLTS AND NUTS ARE NEEDED FOR SECURE MOUNTING. MOUNTING HARWARE PROVIDED.